

<b>Ningbo Wanglong Tech Co.,Ltd</b>	WL/HACCP-19
	Version: A/2
HACCP	Page: total 1 page

Date: Jan 11, 2018

**Products:** food additives Sorbic Acid, Potassium Sorbate,

**Company:** Ningbo Wanglong Tech Co.,Ltd

**Registration address:** No 19, Langhai N-Road Binhai New City Economic Development Area, Yuyao Zhejiang ,China.


**Production address:** No 19, Langhai N-Road Binhai New City Economic Development Area, Yuyao Zhejiang ,China.

**Prospection Usage:** Food and Feed additives      **Users:** food and feed production enterprises

Critical Control Point	Risk	Critical Limits	Monitor Programs				Rectification Measures	Records	Verification
			Objects	Measures	Frequency	Operator			
(Sorbic Acid) Metal Detector	Metal Fragments	Fe: ≤ 2.5mm Non-Fe: ≤3.0mm Stainless Steel ≤ 3.5mm	The finish products in prior to packing	Metal Detector Devices Inspection	Continuous	Trained workshop staff	Isolate foreign body once it is found, then products reprocess	Metal Detector monitors records, Metal Detector calibration records	The shift leader verifies every shift of metal detector records, the workshop manager calibrates

									metal detector device every week.
(Potassium Sorbate) Metal Detector	Metal Fragments	Fe: $\leq$ 2.5mm Non-Fe: $\leq$ 3.0mm Stainless Steel $\leq$ 3.5mm	The finish products in prior to packing	Metal Detector Devices Inspection	Continuous	Trained workshop staff	Isolate foreign body once it is found, then products reprocess	Metal Detector monitors records, Metal Detector calibration records	The shift leader verifies every shift of metal detector records, the workshop manager calibrates metal detector device every week.

# 一、山梨酸流程图 SORBIC ACID FLOW CHART

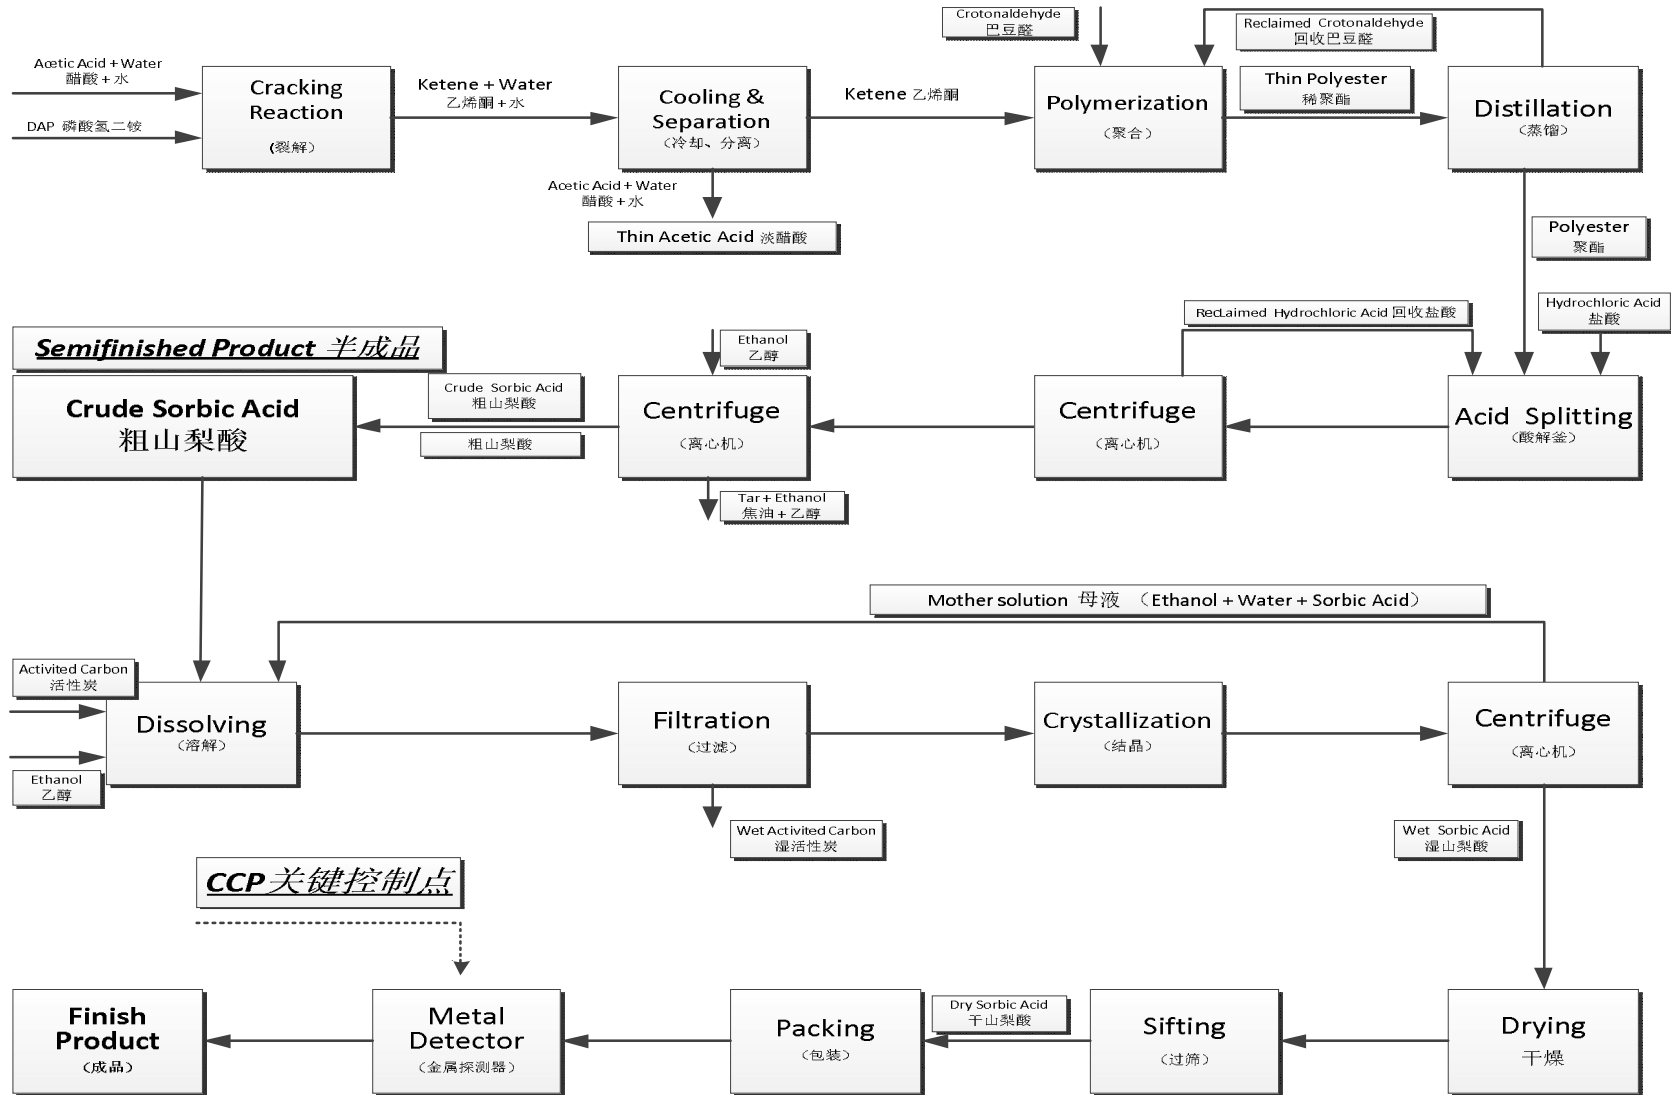

## 二、山梨酸钾流程图 POTASSIUM SORBATE FLOW CHART

